



[Knowledge Base](#) > [Handsets and Device Provisioning](#) > [Yealink Devices](#) > [Manually Provision a Yealink phone](#)

## Manually Provision a Yealink phone

Mike Johnstone - 2025-08-21 - [Yealink Devices](#)

## Manually Provision a Yealink phone

### Access Yealink Phone's Web UI

1. Phone's web UI: to access the phone's web UI press the **OK** button (on the right of the keypad) to retrieve the phone's IP address.
2. Enter the **IP address** on your browser (eg 192.168.1.xx).
3. **Username** and **Password**: admin/admin.
4. Click **Confirm**.

### Account Tab

1. Select the Account tab. (or another unused account if Account 1 is in use).
2. Account Active: **Enable**
3. Label: **Your Name**
4. Display Name: Displays on your telephone phone screen when idle.
5. Register Name: **Full DID** eg 13106341780
6. User Name: **Full DID** eg 13106341780
7. Password: **account password** or the restricted line password – can be found on your account's switchboard.
8. SIP Server: **plus.2talk.com**

9. Port: **5061**
10. Transport: **TLS**
11. Confirm: to **Save**

<b>Account</b>	Account1 ▼	
Register Status	Registered	
Line Active	Enabled ▼	
Label	Ext 1780	
Display Name	13106341780	
Register Name	13106341780	
User Name	MikeJ	
Password	..... 🔒	
<b>SIP Server 1</b>		
Server Host	plus.2talk.com	Port 5061
Transport	TLS ▼	
Server Expires	120	
Server Retry Counts	3	

- [Tags](#)
- [Device](#)
- [Yealink](#)