\bigcirc

Knowledge Base > Handsets and Device Provisioning > Yealink Devices > Manually Provision a Yealink phone

Manually Provision a Yealink phone

Mike Johnstone - 2025-08-21 - Yealink Devices

Manually Provision a Yealink phone

Access Yealink Phone's Web UI

- 1. Phone's web UI: to access the phone's web UI press the **OK** button (on the right of the keypad) to retrieve the phone's IP address.
- 2. Enter the **IP address** on your browser (eg 192.168.1.xx).
- 3. Username and Password: admin/admin.
- 4. Click **Confirm**.

Account Tab

- Select the Account tab. (or another unused account if Account 1 is in use).
- 2. Account Active: Enable
- 3. Label: Your Name
- 4. Display Name: Displays on your telephone phone screen when idle.
- 5. Register Name: **Full DID** eg 13106341780
- 6. User Name: **Full DID** eg 13106341780
- Password: account password or the restricted line password can be found on your account's switchboard.
- 8. SIP Server: plus.2talk.com

- 9. Port: 5061
- 10. Transport: **TLS**
- 11. Confirm: to **Save**

Account	Account1 ~	
Register Status	Registered	
Line Active	Enabled 🗸	
Label	Ext 1780]
Display Name	13106341780]
Register Name	13106341780]
User Name	MikeJ]
Password	••••••	
SIP Server 1		
Server Host	plus.2talk.com	Port 5061
Transport	TLS 🗸	
Server Expires	120]
Server Retry Counts	3]

- Tags
 <u>Device</u>
 <u>Yealink</u>