

Base de conocimiento > Handsets and Device Provisioning > Device Provisioning > Device Provisioning - Grandstream ATA

Device Provisioning - Grandstream ATA Mike Johnstone - 2025-06-12 - Device Provisioning

Device Provisioning - Grandstream ATA

Registering your **Grandstream** in our **Device Provisioning** ensures that you can get your Grandstream up and running in minutes.

- 1. Log into your account.
- 2. Click on **Tools** | **Device Provisioning**.
- 3. Choose Add Device.
- 4. Select **Device Type** (Grandstream type).
- 5. Line Settings | Select Phone Number | Grandstream | Name Device
- 6. Supply **MAC address**.
- 7. Add Time zone | Time Format
- 8. Line Key2: Select Number or Feature
- 9. If this is a BYO Yealink Select '**SAVE**' and manually restart the handset.
- 10. Once provisioned by our Device Provisioning any further changes made from within the portal will automatically restart the handset to reflect your changes

Yealink Bulk upload			
ine settings	19525250273 ~	Grandstream HT81X~	Bosley Mannetonka
ine settings	19525250274 ~	Grandstream HT81X	0274
line settings	19525250275 ~	Grandstream HT81X	0275
Device settings	c074ad9d15ec	207GJSNN519D15EC)
ime settings	America/New_Y ~	12 ~	

Etiquetas
Device
Provisioning